



ASSEMBLY INSTRUCTIONS


Remove all items from the carton. Verify all pieces before assembly.


PARTS LIST

KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	5	Caster	7	1	Seat	12	2	Armrest
2	1	Base	8	1	Mechanism	13	1	Back Bolt + Washers
3	1	Seat Post	9	6	Mechanism Screw	14	1	Back Post Bellow
4	1	Backrest	10	2	Arm Bracket	15	2	Back Post Bellow Screw
5	1	Backrest Post	11	1	Arm Width Adjustment	16	1	Allen Wrench
6	1	Backrest Post Screw			Knob + Washers	17	1	Allen Wrench

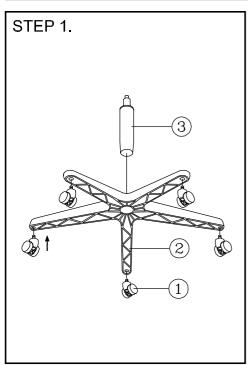


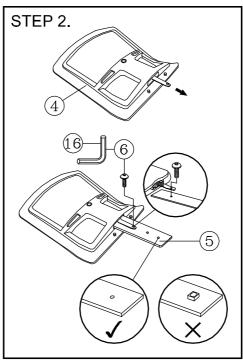

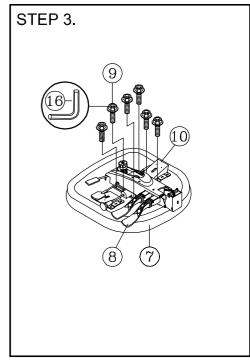

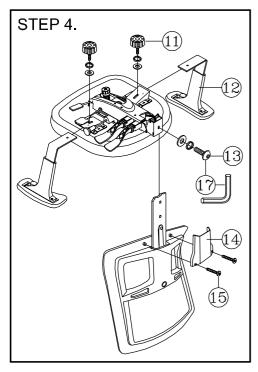



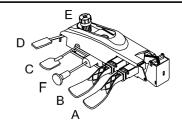

MECHANISM INSTRUCTIONS

- (A) Back angle adjustment lever.
- (B) Combination seat / back angle adjustment lever with infinite lock.
- (C) Seat height adjustment leve.
- (D) Forward tilt lever-
 - *Lift lever B to activate the forward tilt. *Pull lever D backward to allow you to lean to a forward position and push lever B downward to lock position once the desired angle is reached.
- (E) Tension control knob-Turn colockwise to increase tension and counterclockwise to decrease tension.
- (F) Sliding seat: Seat depth adjusts for different user leg lengths.

PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER. DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
 DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS
 ARE TIGHTENED.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS. DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING IT MAY CAUSE SUFFOCATION. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE:SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.